


A0, A1, A2, A3, A4, A5, D8, D9 = FADERS
 D4 = MIDI1
 D6 = MIDI2
 D3 = SW2 (BACK)
 D2 = SW3 (BACK)
 RESET = SW1
 LEDs:
 D13
 D0
 D1
 D5
 D7
 D10
 D11

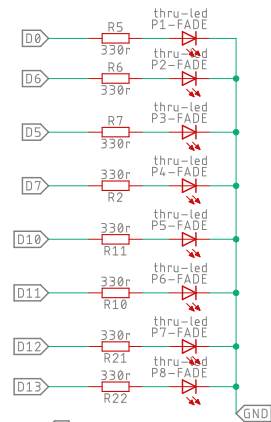

ASDX, ASCX, OCSB, OSD0 all floating (for external peripherals)